

ACTIVE BRAKE WITH WIRING



Spring limit M150 and ROF 25bb/s

Installation of this device leave to expert
He must know how to solder and disassemble airsoft gun
Never use soldering gun!

How connect device into the gun

- 1) Red cable lead to the battery positive.
Add fuse on this cable (not included in package)
- 2) Black cable lead to the battery negative
- 3) Red cable lead to the motor positive
- 4) Black cable lead to the motor negative
- 5) Blue cable lead to the one trigger contact in mechabox
- 6) Blue cable lead to the another trigger contact in mechabox

Be extra sure to connect wires appropriately, otherwise you should destroy the device, weapon or battery.

