


EXTREME ACTIVE BRAKE

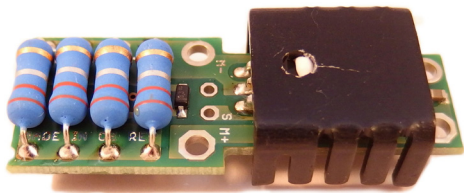

Spring limit M170

Installation of this device leave to expert
He must know how to solder and disassemble airsoft gun
Never use soldering gun!

How connect device into the gun

- 1) Red cable with max. 1,5 qmm lead to the battery positive (**B+**)
Add fuse on this cable (not included in package)
- 2) Black cable with max. 1,5 qmm lead to the battery negative (**B-**)
- 3) Red cable with max. 1,5 qmm lead to the motor positive (**M+**)
- 4) Black cable with max. 1,5 qmm lead to the motor negative (**M-**)
- 5) Blue cable with max. 0,5 qmm lead to the 1st trigger contact (**S**)
- 6) Blue cable with max. 0,5 qmm lead to the 2nd trigger contact (**S**)

Be sure to connect wires appropriately, otherwise you should destroy the device, gun or battery. Drag heat shrink tube (in package) over the device and shrink it by hot air gun.

