


# MICRO ACTIVE BRAKE

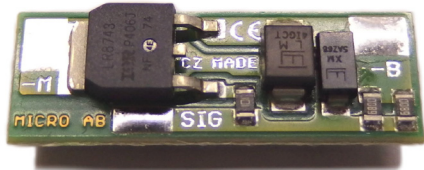

**Spring limit M130 and ROF 25bb/s**

Installation of this device leave to expert  
He must know how to solder and disassemble airsoft gun  
Never use soldering gun!

## How connect device into the gun

- 1) Red cable with max. 1,5 qmm lead to the battery positive (+**B**)  
Add fuse on this cable (not included in package)
- 2) Black cable with max. 1,5 qmm lead to the battery negative (-**B**)
- 3) Red cable with max. 1,5 qmm lead to the motor positive (+**M**)
- 4) Black cable with max. 1,5 qmm lead to the motor negative (-**M**)
- 5) Blue cable with max. 0,5 qmm lead to the 1st trigger contact (**SIG**)
- 6) Blue cable with max. 0,5 qmm lead to the 2nd trigger contact (**SIG**)

Be sure to connect wires appropriately, otherwise you should destroy the device, gun or battery. Drag heat shrink tube (in package) over the device and shrink it by hot air gun.

