



MICRO MOSFET WITH WIRING



Spring limit M140 and ROF 20bb/s

Installation of this device leave to expert
He must know how to solder and disassemble airsoft gun
Never use soldering gun!

How connect device into the gun

- 1) Black thick cable lead to the negative pole of battery (leads alone from device)
- 2) Black thick cable lead to the negative pole of motor (at side with blue wire)
- 3) Blue thin cable lead to the one trigger connector in mechbox (no matter where)
- 4) Red thick cable lead to the positive pole of battery and motor
- 5) Rest of blue thin cable cut and lead between one trigger connector in mechbox and anywhere to red cable.

Add fuse to red cable (not included in package). Be extra sure to connect the red and black wires appropriately, otherwise you will destroy device.

